

ROBERTS

Sound for Generations



RD-10

FM RDS/DAB digital radio

Revival
DAB
Digital Audio Broadcasting

 
Please read this manual before use

Contents

<i>Controls</i>	2-3	<i>Guarantee</i>	18
<i>Battery operation</i>	4		
<i>Mains operation</i>	4		
<i>Operating your radio - DAB</i>	5		
<i>Selecting a station - DAB</i>	6		
<i>Secondary services - DAB</i>	7		
<i>Display modes - DAB</i>	7		
<i>Finding new stations - DAB</i>	8		
<i>Autoselect - DAB</i>	8		
<i>Manual tuning - DAB</i>	9		
<i>Signal strength display - DAB</i>	9		
<i>Operating your radio - FM</i>	10		
<i>Manual tuning - FM</i>	11		
<i>Display modes - FM</i>	12		
<i>FM stereo/mono</i>	12		
<i>System reset</i>	13		
<i>Headphone socket</i>	14		
<i>Display backlight</i>	14		
<i>General</i>	15		
<i>Specifications</i>	15		
<i>Circuit features</i>	15		
<i>Notes</i>	16-17		

Controls

(Top)

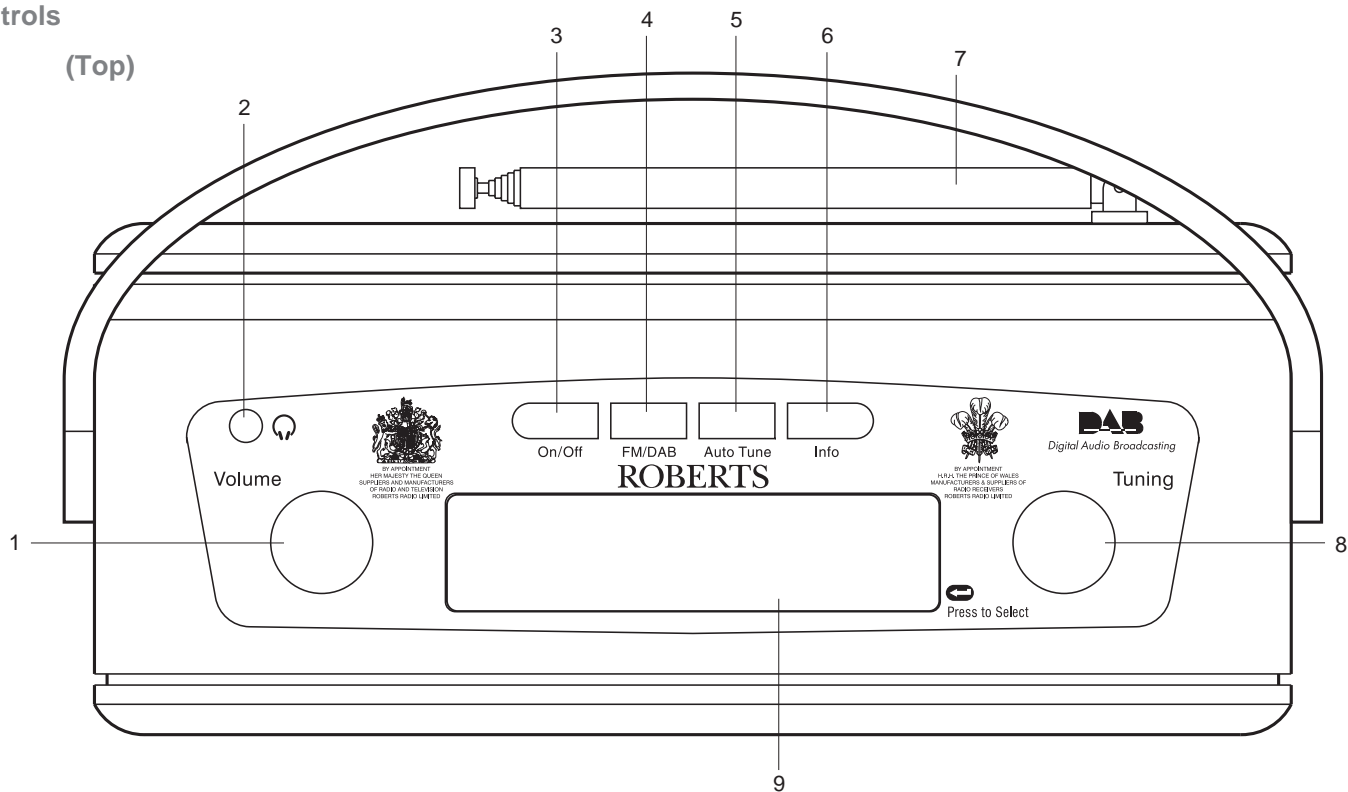


1. Volume control
2. Headphone socket
3. Power button
4. FM/DAB button
5. Auto Tune button

6. Info button
7. Telescopic aerial
8. Tuning control
9. LCD display

If you need any further advice, please call our Technical Helpline on :-
020 8758 0338 (Mon-Fri)

 
(Rear)



Battery operation

1. Release the catch securing the rear door of your radio.
2. Insert four LR20 (D size) batteries into the spaces in the compartment. Take care to ensure all batteries are inserted with the correct polarity as shown inside the battery compartment. Close the rear door and secure the catch
3. Reduced power, distortion and a 'stuttering' sound are all signs that the batteries may need replacing.
4. If the radio is not to be used for any extended period of time it is recommended that the batteries are removed from the radio.

 
We would recommend for economy that the RD-10 is used via the AC adaptor whenever possible with battery operation for occasional or stand-by use only.

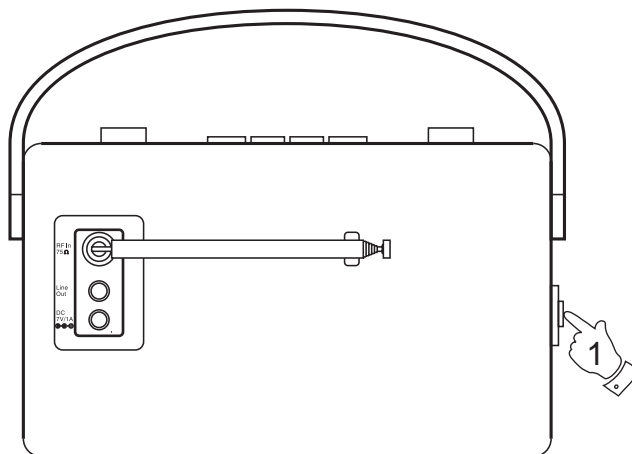

Using the AC adaptor

1. Insert the adaptor plug into the DC in socket on the rear of your radio.
2. Plug the adaptor into a standard 13A mains socket outlet. Whenever the adaptor is used the batteries are automatically disconnected.

 
The AC adaptor should be disconnected from the mains supply and the radio when not in use.

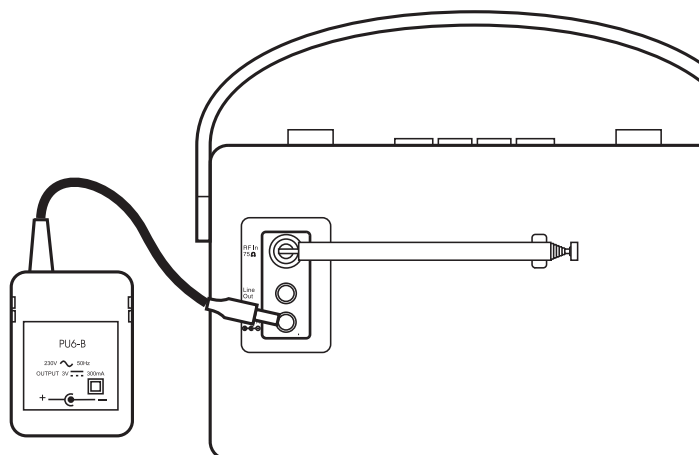

*If you need any further advice, please call our Technical Helpline on :-
020 8758 0338 (Mon-Fri)*

Operating your radio - DAB

 1. Carefully extend the telescopic aerial.
2. Press the **On/Off button** to switch on your radio. The display will show "Roberts DAB digital radio" for a few seconds.
3. If this is the first time the radio is used a quick scan of UK Band III DAB channels will be carried out. The display will show "Autotune Quick scan". If the radio has been used before the last used station will be selected.
4. During Autotune as each group of stations is detected the bottom line of the display will show its name and the station count will be updated. The top line of the display shows a bargraph indicating progress of the Autotune.
5. When the Autotune is completed the first station (in numeric-alpha order 0...9...A.....Z) will be selected.
6. If the station list is still empty after the Autotune your radio will display "No Signal".
7. If no signals are found it may be necessary to relocate your radio to a position giving better reception.

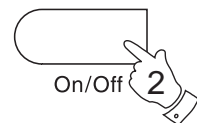

Roberts

Autotune
Quick scan

Searching...


 24
 BBC National DAB




1Xtra	DAB
BBC National	DAB

No signal	DAB
-----------	-----

Selecting a station - DAB

1. The top line of the display shows the name of the station currently selected.
2. Rotate the **Tuning control** to scroll through the list of available stations. Stop rotating the Tuning control when you find the station that you wish to hear.
3. Press and release the **Tuning control** to select the station. The display may show "Tuning" while your radio finds the new station.
4. Adjust the **Volume control** to the required setting.

   Note: If after selecting a station the display shows "Not Available" it may be necessary to relocate your radio to a position giving better reception.

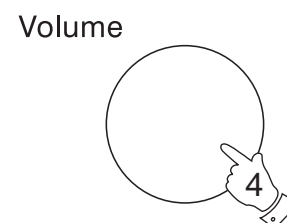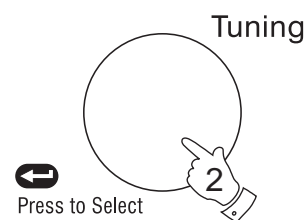

If you need any further advice, please call our Technical Helpline on :-
020 8758 0338 (Mon-Fri)

Secondary services - DAB

1. Certain radio stations have one or more secondary services associated with them. If a station has a secondary service associated with it the display will show ">" next to the station name on the station list. The secondary service will then appear immediately after the primary service as you rotate the tuning control clockwise.

BBC5Live> DAB
■■■■■


>BBC SportX DAB
■■■■■

Display modes - DAB

Your radio has five display modes:-

1. Press the **Info button** to cycle through the various modes.

- | | |
|--------------------|---|
| a. Scrolling text | Displays scrolling text messages such as artist/track name, phone in number, etc. |
| b. Programme type | Displays type of station being listened to e.g. Pop, Classic, News, etc. |
| c. Multiplex Name | Displays name of multiplex to which current station belongs. |
| d. Signal strength | Displays signal strength for station being listened to. |
| e. Time and date | Displays current time and date. |

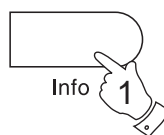 

a BBC 7 DAB
Just a Minute...

b BBC 7 DAB
Culture

c BBC 7 DAB
BBC National DAB

 
 
d BBC 7 DAB
■■■■■

e BBC 7 DAB
19:17 08-06-2003

Finding new stations - DAB

As time passes new stations may become available. To find new stations proceed as follows:-


1. Press and release the **AutoTune button**, the display will show "Autotune Quick Scan". Your radio will perform a scan of the UK DAB frequencies. As new stations are found the station counter on the right-hand side of the display will increase and stations will be added to the list
2. To carry out a full scan of the entire DAB Band III frequencies press and hold down the **AutoTune button** for more than 2 seconds and then release. The display will show "Autotune Full scan". As new stations are found the station counter on the right-hand side of the display will increase and stations will be added to the list

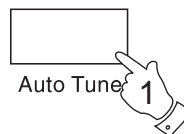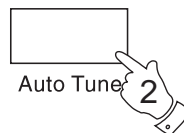Autotune
Quick scanAutotune
Full scan

Autoselect - DAB

As an alternative to pressing the tuning control to select a station your radio can be set to automatically select a station.

 1. Rotate the ***Tuning control*** a few clicks in either direction, immediately press and hold in the tuning control until the display shows "Autoselect ON".
2. Rotate the ***Tuning control*** until the station you require is visible on the display, after a few seconds your radio will automatically select the station shown on the display.
3. To switch off Autoselect rotate the ***Tuning control*** a few clicks in either direction, immediately press and hold in the ***Tuning control*** until the display shows "Autoselect OFF".

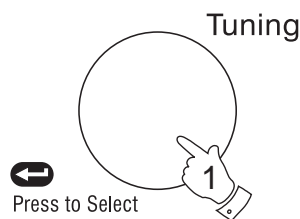

Autoselect ON



 
Autoselect OFF

*If you need any further advice, please call our Technical Helpline on :-
020 8758 0338 (Mon-Fri)*

Manual Tuning - DAB

Manual tuning allows you to tune directly to the various DAB Band III channels. UK DAB stations located in the range 11B to 12D.

1. Press and hold in the **Tuning control** until the display shows "Manual tune".
2. Rotate the **Tuning control** to select the required DAB channel.
3. Press and release the **Tuning control** to select the channel.
4. Rotate the **Tuning control** to select the stations contained within the Multiplex (group of stations) for the selected DAB channel.
5. Press and release the **Tuning control** to return to normal tuning mode.

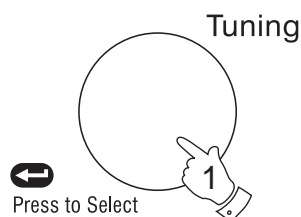

Manual tune

 
12B 225.648 MHz
BBC National DAB

BBC 7 MAN
BBC National DAB

BBC 7 DAB
BBC National DAB

Signal strength display - DAB




1. Repeatedly press and release the **Info button** until the lower line of the display shows signal strength.
2. Position your radio and carefully angle the telescopic aerial for best reception using the signal strength display as a guide. Move your radio around and position so as to give maximum number of black rectangles on signal strength display.
3. The clear unfilled rectangle indicates minimum signal level required for satisfactory reception.

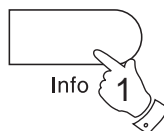



BBC 7 DAB
■■■■■

Operating your radio - FM

   1. Carefully extend the telescopic aerial.
2. Press the **On/Off button** to switch on your radio. The display will show "Roberts DAB digital radio" for a few seconds.
3. Press the **Band button** to select the FM band.
4. Press and immediately release the **Auto Tune button**, your radio will scan in an upwards direction (low frequency to high frequency) and stop automatically when it finds a station of sufficient strength.
5. After a few seconds the display will update and show station name.
6. To find other stations press and release the **AutoTune button** as before.
7. To scan the FM band in a downwards direction (high frequency to low frequency) press and hold down the **AutoTune button** for 0.5 seconds and then release.
8. When the waveband end is reached your radio will recommence tuning from the opposite waveband end.
9. Adjust the **Volume control** to the required setting.
10. To switch off your radio press the **On/Off button**.

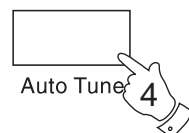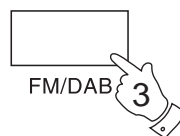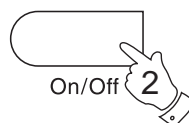




Volume

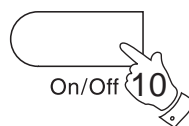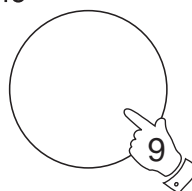  



If you need any further advice, please call our Technical Helpline on :-
020 8758 0338 (Mon-Fri)

Manual tuning - FM

   1. Press the **On/Off button** to switch on your radio.
2. Press the **Band button** to select the FM band. Fully extend the **Telescopic aerial**.
3. Rotate the **Tuning control** to tune to a station. The frequency will change in steps of 50kHz.
4. When the waveband end is reached the radio will recommence tuning from the opposite waveband end.
5. Set the **Volume control** to the required setting.
6. To switch off your radio press the **On/Off button**.

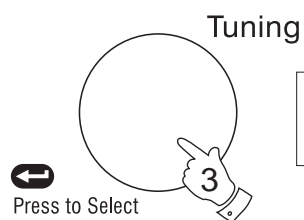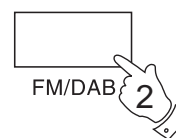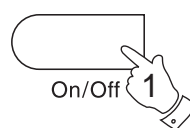


Volume

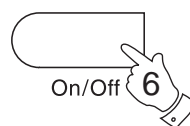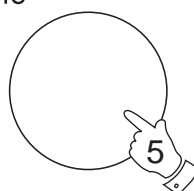  

Display modes - FM

On FM the bottom line of the display can be set to any of the following modes:-

 1. Press the **Info button** to cycle through the various modes.

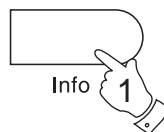


a. Scrolling text	Displays scrolling text messages such as artist/track name, phone in number etc.
b. Program Type	Displays type of station being listened to e.g. Pop, Classic, News, etc.
c. Signal strength	Displays signal strength for station being listened to.
d. Time and date	Displays current time and date.
e. Frequency	Displays frequency of the station being listened to.
f. Audio mode	Display shows Auto (stereo) or mono.

a	BBC R2 FM The latest news
b	BBC R2 FM Pop Music
c	BBC R2 FM ■■■■■
d	BBC R2 FM 12:02 16-06-2003
e	BBC R2 FM 88.10MHz
f	BBC R2 FM Auto (Stereo)

FM Stereo/Mono

1. If a station being received is weak some hiss may be audible. To reduce the hiss press and hold in the **Tuning control** until the display shows "Audio mode: Mono". Your radio will switch to mono mode.
2. To return to stereo mode press and hold in the **Tuning control** until the display shows "Audio mode: Auto". Your radio will switch to stereo mode.

 Note: FM stereo is only available when listening via earphone/ headphones

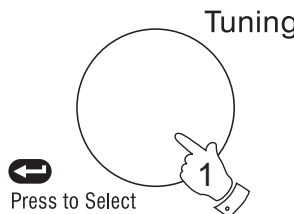

Audio mode: Mono
Audio mode: Auto

 
 
 
If you need any further advice, please call our Technical Helpline on :-
020 8758 0338 (Mon-Fri)

System reset

If your radio fails to operate correctly, or some digits on the display are missing or incomplete carry out the following procedure.

- 1. Switch off your radio.
- 2. Switch on your radio - as soon as the screen shows "Roberts DAB digital radio" press and hold in the Tuning control until the display shows "System Reset".
- 3. A full reset will be performed. All presets and station lists will be erased.
- 4. If DAB was used last then a "Quick scan" of the DAB band will be performed, otherwise a "Quick scan" will be carried out the next time the DAB band is selected.

If a problem persists our technical staff would be pleased to offer any assistance on operating the radio. Our technical helpline number is 020 8758 0338.

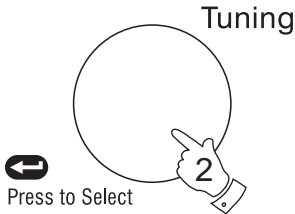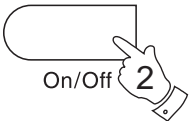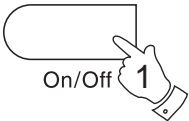

System reset

 
Autotune
Quick scan

■■■■■■■■■■■■■■■■■■■■
Searchin9...

■■■■■■■■■■■■■■■■■■■■ 24
BBC National DAB


Headphone socket

A 3.5mm **Headphone Socket** located on the top left hand corner of your radio is provided for use with either headphones or an earpiece. Inserting a plug automatically mutes the internal loudspeaker.

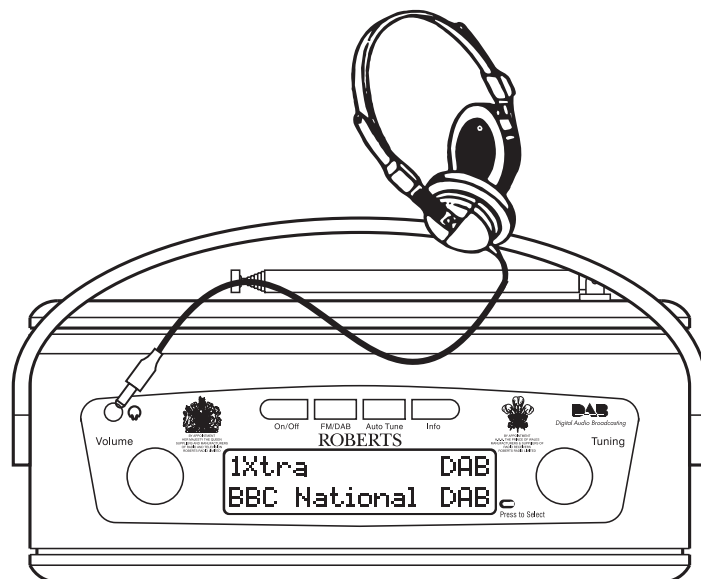

Display backlight


 
1. The display backlight will be switched on for approximately 12 seconds when any button is pressed.
2. When your radio is powered by AC mains the display backlight will always be switched on.

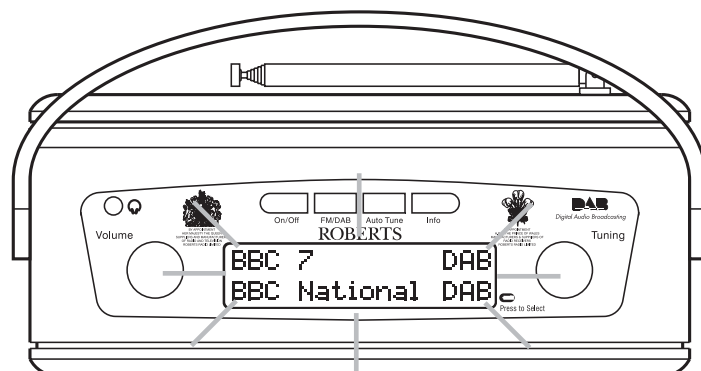

If you need any further advice, please call our Technical Helpline on :-
020 8758 0338 (Mon-Fri)


General

  Do not allow this radio to be exposed to water, steam or sand. Do not leave your radio where excessive heat could cause damage such as in a parked car where the heat from the sun can build up even though the outside temperature may not seem too high. It is recommended that the DAB band be used wherever possible as better results in terms of quality and freedom from interference will usually be obtained than on the FM band.

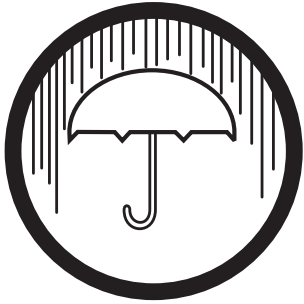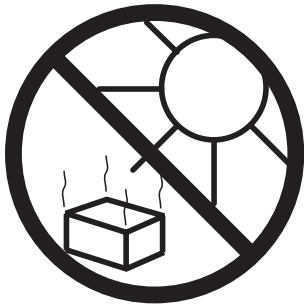

Specifications

Power Requirements

Mains AC 230 volts, 50Hz  only
Batteries 4 x LR20 (D size)

Battery Life

Approx. 30 hours of listening for 4 hours a day at normal volume using alkaline cells.

Frequency Coverage

FM 87.5-108MHz
DAB 174.928 - 239.200MHz

Circuit Features

Loudspeaker	75mm full range
Output Power	1.0 Watt
Headphone socket	3.5mm dia
Aerial System	FM Telescopic aerial
	DAB Telescopic aerial

Notes

*If you need any further advice, please call our Technical Helpline on :-
020 8758 0338 (Mon-Fri)*

Notes

Guarantee

This instrument is guaranteed for twelve months from the date of delivery to the original owner against failure due to faulty workmanship or component breakdown, subject to the procedure stated below. Should any component or part fail during this guarantee period it will be repaired or replaced free of charge.

The guarantee does not cover:

1. Damage resulting from incorrect use.
2. Consequential damage.
3. Receivers with removed or defaced serial numbers.

N.B. Damaged or broken telescopic aerials will not be replaced under guarantee.

Procedure:

Any claim under this guarantee should be made through the dealer from whom the instrument was purchased. It is likely that your Roberts' dealer will be able to attend to any defect quickly and efficiently, but should it be necessary the dealer will return the instrument to the company's service department for attention. In the event that it is not possible to return the instrument to the Roberts' dealer from whom it was purchased, please contact Roberts Radio Technical Services at the address shown on the rear of this manual.

*If you need any further advice, please call our Technical Helpline on :-
020 8758 0338 (Mon-Fri)*

ROBERTS RADIO TECHNICAL SERVICES

97-99 Worton Road

Isleworth Middlesex

TW7 6EG

Technical Helpline :- 020 8758 0338 (*Mon-Fri during office hours*)

Issue 1

