

Specifications	
Battery	1 x LR03 (AAA) size
Battery Life	Approx. 15hrs using alkaline battery
Frequency coverage	MW 530 - 1710kHz FM 87.5 - 108MHz
Semiconductors	3 Integrated circuits 3 Diodes
Output Power	0.5mW
Earphone Jack	3.5mm dia (Stereo)

The company reserves the right to amend the specification without notice

Imported by:-
ROBERTS RADIO LIMITED
 PO BOX 130
 MEXBOROUGH
 SOUTH YORKSHIRE
 S64 8YT

ROBERTS RADIO TECHNICAL SERVICES DEPARTMENT
 97-99 WORTON ROAD
 ISLEWORTH MIDDLESEX
 TW7 6EG


If you need any further advice, please call our Technical Helpline on
 0181 758 0338 (Mon-Fri)



Issue 1


ROBERTS
 Sound for Generations

R986 MW/FM/FM STEREO 2-BAND RADIO

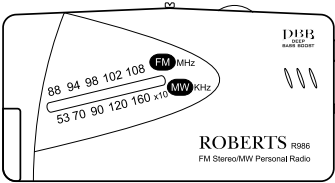

Operating Instructions

Controls

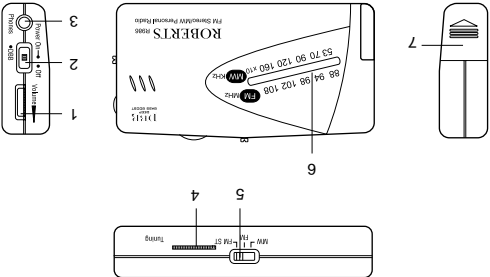

1. Volume Control
2. Power On/Off/DBB switch
3. Earphone Jack
4. Tuning Control
5. MW/FM/FM Stereo Band Selector
6. Dial Pointer
7. Battery Cover

If you need any further advice, please call our Technical Helpline on
 0181 758 0338 (Mon-Fri)

General

Do not allow this unit to be exposed to water, steam or sand. Do not leave the unit where excessive heat could cause damage such as in a parked car where the heat from the sun can build up even though the outside temperature may not seem too high. It is recommended that the FM band be used where ever possible as better results in terms of quality and freedom from interference will usually be obtained than on the MW band.

Battery

To insert the battery first open the battery cover (7) by sliding it in the direction shown by the arrow. Insert one AAA (LR03) size battery into the compartment. Plug the earphones supplied into the earphone jack (3) located on the right-hand side of the radio.

Earphones

The earphones act as the FM aerial when plugged into the earphone jack. There is a separate directional aerial built into the radio for MW reception. To achieve the best MW reception, it may be necessary to rotate the radio.

Aerials

Volume Control
 Adjust the volume control (1) to the desired level of sound. Rotating the control clockwise will increase the sound level.

Dial Pointer

Rotate the tuning control until the dial pointer (6) corresponds to the frequency of the desired station.

Tuning Control

Slowly rotate the tuning control (4) to select the desired station.

MW/FM/FM Stereo Band Selector

Set the band selector switch (5) to the desired waveband. For MW reception set the switch to the "MW" position. For FM stereo reception set the switch to the "FM ST" position. If the FM signal becomes weak or is accompanied by a high level of background hiss, you may select MONO mode by setting the switch to the "FM" position.

Power On/Off/DBB (Deep Bass Boost) Switch

Return the power switch to the "Off" position to turn off the radio. Setting the switch to the "DBB" position will enhance bass sounds. Turn on the radio by setting the power switch (2) to the "On" position.